


# Safety & Security

## NATS

### Driver door kits

- Driver door kits can be used as option in combination with an alarm kit to enable key-less entry.
- Driver door kits should ALWAYS be used in combination with a key-less entry kit (unless explicitly mentioned otherwise).
- CDL = Central Door Lock.

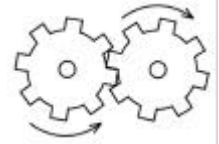

Model	Specification	Country	From	Until	Part Number	A-DC	E-DC	DC	E-RRP (Euro)	Other Information
S14	-	RHD	07/95	-	KE255-65F50	9	G	95U	32	
S14	-	LHD	07/95	-	KE255-65F00	9	G	95U	32	
R20	-	RHD	04/94	05/96	KE255-0F050	9	G	95U	32	
R20	-	LHD	04/94	05/96	KE255-0F000	9	G	95U	32	
Y60	-	All	08/95	10/97	KE255-20J00	9	G	95S	30.8	
C23M	-	RHD	10/95	-	KE255-19C50	9	G	95U	32	
C23M	-	LHD	10/95	-	KE255-19C00	9	G	95U	32	
W10	-	RHD	02/95	-	KE255-80N50	9	G	95U	32	
W10	-	LHD	02/95	-	KE255-80N00	9	G	95U	32	
P10E	W/o factory fit key-less entry	All	06/90	06/96	KE255-70J00	9	G	95U	32	
Y10	-	All	07/95	-	KE255-75R00	9	G	95U	32	
K11E	Without CDL	RHD	12/95	-	KE255-51B50	9	G	95U	32	
K11E	Without CDL	LHD	12/95	-	KE255-51B00	9	G	95U	32	